




SHIFTPRODUCTS.COM

## STAINLESS VISOR (FOR W900) INSTALLATION

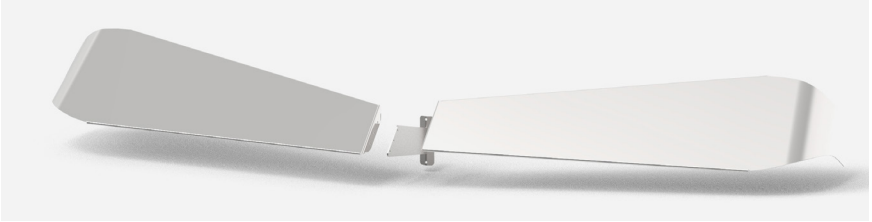

1. Remove bolt for upper mirror arms.
2. Grind 3 hucks from upper arm to cab on each side.
3. Drill out and install nut inserts for 1/4" hardware.
4. Cut down center bracket to what templates are.
5. Mark end of visor with template. One template works on both sides.
6. Drill two 9/32" holes on each side of the visor where template marked it.
7. Bolt the two halves together with center bracket on one side.
8. Set visor in place on truck. It will use the two forward holes on the mirror mount.
9. Snug up 1/4" hardware and set other piece of the center mount on rubber on window.
10. Mark rubber for center mount.
11. Mark hole on center mount from window to center mount on visor.
12. Remove visor from truck and remove rubber window lock from window.
13. Heat up a punch and push through the window where the center mount marks are.
14. Cut window lock where the bolts will go through center part of rubber.
15. Install window lock back into rubber.
16. Drill hole into center mount for windshield where the center mount of the visor goes.
17. Install center mount onto window. Use washers so nuts don't pull through the inside of the rubber.
18. Don't over-tighten center mount as it will break the glass.
19. Peel upper & lower end of protective film on visor & put visor in place.
20. Install upper mirror arm brackets on top of visor and tighten bolts.
21. Install center bolt into center mount.
22. Remove protective film from visor and install upper mirror arm bolts.